

## PR-P05, 09

+12B	1
GND	2
W0	3
W1/SIG	4
LED-G	5
LED-R	6
Beep/ADDR	7
Secure	8

## Контроллер

Reader	
1	+12B
2	Data 1
3	GND

